

1-800-THE-SIGN

PHONE (800)843-7446 ♦ FAX (954)989-9099

INSTALLATION GUIDE

SELF STANDING POST KIT


Tools Needed Screwdriver or Screw Gun, Shovel for Sandbags (optional)



Step 1

Assemble Supports & Posts

Slide vertical post with angle support into routed holes of the base. Make sure all remaining holes are on the same side. Screw together with large head screws. Twist out the tab from the center of the route.

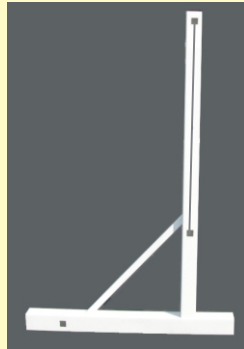

Step 2

Assemble Sign & Tracks

Slide the horizontal support tracks on to the sign face so they are even with the sign. Screw tracks onto position on the sign using the 8 small screws (6 for 4x4 signs).



Step 3

Connect Sign to Posts

Take the sign with tracks and slide one side of it into the routed groove of the vertical post until it hits the stopper. Note: if you position it at a slight angle it will be easier to get into the groove. Screw the sign and tracks into place using 3 large screws. Repeat with second vertical post.



Step 4

Screw Together

Step 5

Insert Stabilizer & Sandbags

Use large head screws to connect tracks to posts.

Slide stabilizer into routed holes in base until it hits the tab. Screw in place with large head screws.

Fill sandbags. Place two sandbags on the front of either base and one on the center of the stabilizer.

